la cuchilla para barba y bigote. unidad en marcha. NOTA: La luz no funciona con Inz se euceuqerà automàticamente al poner la recortar el pelo de la nariz y de los oidos, la




rara mayor conveniencia ai 25 mm (1 pulgada) en la nariz. uo inserte el cabezal más de circular. Para evitar lastimarse, is nuigga cou nu movimiento arriba y abajo mientras gira usus y desilceio despacio nacia lentamente el cabezal en la Encienda la unidad. Inserte

COMO RECORTAR LOS PELOS EN LA NARIZ

encontró al sacar la recortadora de la caja. qele el cabezal en la posicion original, como la 3. Si nated no desea usar la opción oscilante,

recortadora para todas su necesidades. se qui contortable que es esta A medida que prueba las varias posiciones, eucoupars la posición que mejor le conviene. le parezca más confortable. Con tiempo, usted Pruebe cada posición hasta encontrar la que escoder cualquiera de las 2 otras posiciones. capezal en la posicion central, pero usted puede

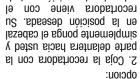

de alcanzar. Para usar esta wgs delicadas y dificiles facilità el recorte en las zonas

oscilante ajustable con 3 posiciones, lo cual 1. Su recortadora está dotada de un cabezal

> RECORTADORA US AASU AAAA OTSIJ ATSE AAOHA

4. Atloje el boton lurbo para regresar al poder necesite más tuerza.

3. Siga oprimiendo el botón Turbo mientras 2. Oprima el botón Turbo.

1. Encienda el aparato.

Para activar la función Turbo:

therza, lo cual tacilità el cortado del pelo grueso. Turbo. La función Turbo ofrece un 15% más Su recortadora está equipada con un botón


FUNCION TURBO

"Instrucciones de limpieza" de este manual. en el chorro de agua, como se indica en la sección eu el agua. Para limpiarla, sólo enjuague la cuchilla * No nse su recortadora en la ducha y no la ponga

skups baka encender la unidad. 4. Deslice el botón de encendido/apagado hacia 3. Su recortadora ya està lista para utilizarse.

compartimiento de las pilas. 2. Después de introducir las pilas, cierre el recortadora.

de la unidad. Esto aumentara la vida util de su nesi, la unidad por un largo periodo, saque las pilas scapado las pilas o no va a

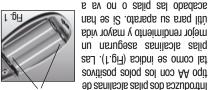


(+) ovitizoq olo9

bijas ajcajinas asegnran un tal como se indica (Fig.1). Las tipo AA con los polos positivos jutroduzca dos pilas alcalinas de

compartimiento para las pilas. 1. Para introducir las pilas, quite la cubierta del

COMO OPERAR LA RECORTADORA

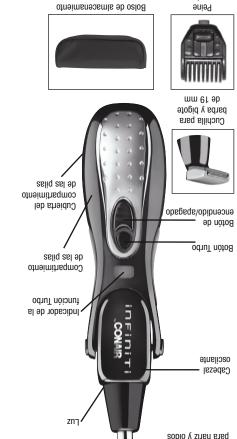

Patente en tramite

p bosicioues

accesorio con

Modelo NE158CS RECORTADORA PERSONAL

кесопадога

està administrando oxigeno. nesugo biognetos eu serosol (spray) o donde se 7. No lo utilice al aire libre, ni donde se están

nzo, verifique que las cuchillas estén alineadas Fato podria provocar una herida. Antes de cada roto o danado, o si faltan dientes a la cuchilla. 6. No use este aparato si el peine accesorio està

mientras està funcionando. 2. No colodue este aparato en ninguna superficie

ninguna de las aberturas. 4. Nunca deje caer ni inserte un objeto en

autorizado para que lo examinen y lo reparen. us csido si sgua. Lievelo a un centro de servicio collectamente, si na caido, si esta danado o si 3. Nunca use el aparato si no funciona

accesorio recomendados por el tabricante. recomendados por el fabricante. Sólo use describe en este manual. Sólo use accesorios bara el cual fue disenado y tal como se 2. Use este aparato únicamente con el propósito

eu o cerca de ninos o personas con alguna

1. Este aparato no debería ser usado por, o jesionės personalės:

el riesgo de quemaduras, electrocución, incendio ADVERTENCIA— Para reducir

3. No colodue el aparato ni lo deje caer al agua u

2. No lo use mientras se está bañando o tomando

después de usario. 1. Siempre desconecte el aparato inmediatamente hor descarda:

apagado. Para reducir el riesgo de muerte o herida mente activo, incluso cuando el interruptor está Cualquier electrodoméstico permanece eléctrica-

PELIGRO-

AUDA 130 OGAL31A OTARAMA 13 ADN3TNAM OJAASU INSTRUCCIONES ANTES DE **CEA TODAS LAS**

cnsjes jas signieutės: precauciones básicas de seguridad, entre las en la presencia de niños, siempre se deben tomar Cuando se usan aparatos eléctricos, especialmente

CALCAPTER IMPORTANTES SEGURIDAD **MEDIDAS DE**

JANO2A39 **AROUATRODƏR** PROFESSIONAL

Modelo NE158CS

Mantenimiento

Instrucciones y

CONVIB

"! **...**! ...! ...! ...!

1.) Your NE158CS features a 3 position pivoting head for easy access when trimming delicate and hard to reach areas.

NOW YOU'RE READY TO OPERATE YOUR

To use this feature:

TRIMMER

2.) Pick up your NE158CS with the front of the trimmer facing towards you, and simply push on the pivoting head. There are 3 different positions, so set it to the one most comfortable for you (the unit comes

prepackaged at the first setting, but you can adust your groomer to either one of the other two settings.) It will take some time to get used to your own personal setting, so try each one until you find a setting that works for you. As you try each setting, you will notice how comfortable this unit makes trimming your nose/ear hairs or general grooming.

3. If you do not wish to use the pivoting head feature, just leave the trimmer as it was when it was removed from the packaging.

TO TRIM YOUR NOSE HAIR

Turn unit on. Gently insert trimmer head into

nostril. Gently move trimmer in and out of the nostril using a circular motion while rotating the trimmer around the nostril opening. Avoid inserting the trimmer more than 1" to ensure safe trimming. For added convenience, when using the



nose/ear trimmer blade the light on the unit will automatically turn on when the trimmer is in use. **NOTE:** There is no light when using beard/ mustache trimmer

IMPORTANT SAFETY INSTRUCTIONS opening of the appliance.

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER-

To reduce the risk of injury:

- 1. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 2. Do not use appliance while bathing or in the
- 3. Do not place appliance in, or drop into water or

WARNING—

To reduce the risk of burns, fire, or injury to

- 1. This appliance should not be used by, on, or near children or individuals with certain disabilities.
- 2. Use appliance only for its intended use as described in this manual. Only use attachments recommended by the manufacturer.
- 3. Never operate the appliance if it is not working properly, has been dropped or damaged, or dropped into water. Return the appliance to a

Conair service center for examination and repair. 4. Never drop or insert any object into any

- 5. Do not place the appliance on any surface while it is operating.
- 6. Do not use the appliance with a damaged or broken comb or with teeth missing from the blades, as injury may result. Before each use, make certain the blades are aligned properly.
- 7. Do not use the appliance outdoors or operate where aerosol (spray) products are being used or oxygen is being administered.

PERSONAL GROOMER Model NE158CS Nose/Ear Trimmer Blade



3/4" Grooming

Adjustable

Storage Pouch

Patent Pending


insure the best performance and

Insert two AA alkaline batteries.

TO OPERATE PERSONAL GROOMER

1. To insert batteries, remove compartment cover.

positive end up as indicated in (Fig. 1). (Alkaline batteries will longest life for your appliance.) If you are not going to use the unit for a long period of time, or if batteries are dead, remove

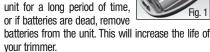

your trimmer. 2. After inserting the batteries, close the battery

- compartment.
- 3. Now your unit is ready to be used.*
- 4. Slide the On/Off switch upward to turn the unit on.

*Do not use in the shower or submerse unit in water. To clean, simply rinse trimmer blade under faucet as illustrated under how "to clean vour trimmer".

TURBO FEATURE

This product is equipped with a turbo boost button. When activated, this will provide 15% more cutting power. This is especially useful for cutting through thicker hair.

To activate the turbo feature:

- 1. Turn the Power switch to the "on" position.
- 2. Press the Turbo button.
- 3. Continue to press the Turbo button for as long as you need the extra power.
- 4. Release the Turbo button to return to normal power.



in Fini Ti™ CONAIR®

Use and Care Instruction Manual

Model NE158CS

Service Center: Conair Corporation Service Department 7475 Glen Harbor Blvd., Glendale, Arizona 85307

©2007 CONAIR CORPORATION



IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF PARTICULAR PURPOSE, SHALL BE LIMITED PARTICULAR PURPOSE, SHALL BE LIMITED OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with sand handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

LIMITED THREE YEAR WARRAUTY

Note: The trimmer head attachment can also be cleaned by rinsing under water.

aligned (Fig 8)



4. To reassemble the head onto the body, slign the arrow on the body and the circle on the body and then, turn clockwise until the arrow on the body is

3. After cleaning, make sure to shake dry the head before replacing it to the body.





 Σ . Only rinse the head under water (Fig Σ). For proper functioning of the unit, the handle can not touch or be immersed in water.

Fig. 6

1. To remove the trimmer head for cleaning, turn the head for cleaning, turn the until the arrow mark aligned with the circle mark, then lift the head gently (Fig 6).

Make sure trimmer is off.

TO CLEAN YOUR TRIMMER

After your mustache has been trimmed to the desired length, remove the 5-position trimming attachment and, using the blades only, define the outline of the bottom of your mustache.

ALWAYS TRIM YOUR MUSTACHE HOWN MUSTACHE TOP DOWN

3. Place the 5-position comb over the trimmer blades and anap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

asmp mustache. 2. Comb through your mustache in the direction it grows.

1. For best results, start with a clean, slightly

TO TRIM YOUR MUSTACHE

3. If you decide you want a closer trim, you can now adjust the 5-position comb to a shorter setting and go over your beard again until you achieve the desired length.

2. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard, because the hair will be cut too short.)





1. To use the adjustable attachment comb, slide it over the trimmer blade and snap down into position (Fig 4). At first, until you become familiar with the adjustments, use the longest trim setting (3/8"). (You can always go back and make your beard a little shorter.) (Fig. 5)

UOW YOU'RE READY TO TRIM YOUR BEARD

3. Attach the 3/4" trimmer head. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and toward your hairline.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your

1. It is always best to begin with a clean, slightly

damp beard.

OUTLINING YOUR BEARD





To use a new trimmer head on the unit, properly install the head into position making sure the arrow mark is aligned with the circle mark, turn clockwise until the two arrows are aligned (Fig. 3) and lock into position.

Begin with trimmer in normal pivot position. Hold the handle of the trimmer while turning the trimmer head counterclockwise until the arrow mark is aligned properly with the circle mark (Fig. 2). At this point you should be able to easily lift the nose/ear trimmer head from the handle.

GETTING STARTED TO SWITCH TRIMMER HEADS

For the best trimming results, your beard should be slightly damp (not wet) before using the trimmer. This will prevent the trimmer from removing more hair than desired.

If you are unsure of the type of beard or mustache that most suits your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your shape to trim your beard/mustache weekly.

3. The thickness of your beard/mustache.

1. The shape and dimensions of your face. 2. The natural growth of your beard/mustache.

There are three key factors that determine which beard or mustache style is most suitable for your face.

TYPES OF BEARDS/MUSTACHES GROWING A BEARD OR MUSTACHE




surface of ear to trim protruding hairs. Never insert trimmer more than 1" into ear canal.

Turn unit on. Gently insert trimmer head no more than 1" into outer ear canal. Gently move trimmer in and out of the outer ear and rotate trimmer in a circular motion around the ear canal opening. Guide the ear canal opening.

AIAH AAA AUOY MIAT OT

CÓMO RECORTAR LOS PELOS EN LOS OÍDOS

Encienda la unidad. Inserte lentamente el cabezal en el oído, no más de 25 mm (1 pulgada). Deslícelo despacio hacia adentro y afuera mientras gira la unidad con un movimiento circular. Guíe

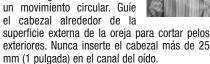



TIPOS DE BARBAS Y DE BIGOTES BARBAS Y BIGOTES


El tipo de barba o de bigote que más conviene a su rostro depende de:

- 1. La forma y el tamaño de su rostro.
- 2. La forma del crecimiento natural de su barba o de su bigote.
- 3. El espesor de su barba o de su bigote.
- Si no está seguro del tipo de barba o bigote que le conviene, busque el consejo de un estilista profesional. Después de darle forma a su barba o a su bigote, tendrá que mantener su aspecto, usando la cortadora una vez por semana.
- Para lograr resultados óptimos, humedezca ligeramente (no moje) su barba o su bigote antes del recorte. Esto logrará un cortado más preciso.

CÓMO CAMBIAR EL CABEZAL

Ponga el cabezal en la posición central. Coja la cortadora firmemente con una mano y gire el cabezal en el sentido antihorario con la otra mano, hasta que el triángulo y el círculo coincidan (Fig.2). Jale el cabezal hacia arriba.

Instale la cuchilla para la barba y el bigote sobre el cabezal y gírela en el sentido horario hasta que los dos triángulos coincidan (Fig.3).

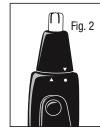



DELINEAR SU BARBA

- 1. Se le hará más fácil el contorneo y el recorte si su barba está limpia y ligeramente humedecida.
- 2. Peine su barba en la dirección del crecimiento natural del pelo antes de empezar a darle forma
- 3. Déle forma a su barba empezando por debajo de la quijada y subiendo hacia la oreja por cada lado del rostro. Siga dando forma al área de la mejilla, a las patillas y al nacimiento del pelo.

CORTAR SU BARBA

1. Ensarte el peine accesorio con 5 posiciones encima de la cuchilla para la barba (Fig.4). Le recomendamos que utilice la posición más larga (10 mm) hasta acostumbrarse a lo largo del recorte (siempre podrá volver a acortar la barba). (Fig.5)





- 2. Empiece a cortar su barba con movimientos parejos y suaves, desde las patillas hasta la quijada. Nunca corte en la dirección opuesta a la del crecimiento natural del pelo. El recorte resultaría demasiado corto.
- 3. Si desea un recorte aún más corto, escoja un largo de recorte más corto, y siga acortando su barba hasta conseguir el tamaño deseado.

CORTAR SU BIGOTE

- 1. Se le hará más fácil cortar su bigote si está limpio y ligeramente humedecido.
- 2. Peine su bigote en la dirección del crecimiento natural del pelo.
- 3. Ensarte el peine accesorio con 5 posiciones sobre las cuchillas. Empiece con la posición más larga (siempre podrá volver a acortar el bigote).


SIEMPRE CORTE SU BIGOTE DESDE ARRIBA HASTA ABAJO

Cuando haya terminado, saque el peine accesorio y déle forma a la parte inferior de su bigote.


INSTRUCCIONES DE LIMPIEZA

Asegúrese que la unidad esté apagada

1. Para extraer el cabezal, gire el mismo en el sentido antihorario hasta que el triángulo y el círculo coincidan y jale el cabezal lentamente hacia arriba (Fig.6).

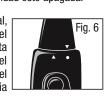

2. Enjuague el cabezal solamente bajo el chorro de agua (Fig.7). Para que su unidad siga funcionando correctamente, asegúrese que la manija nunca entre en contacto con el agua.

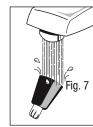

- 3. Después de limpiar el cabezal, séquelo bien
- antes de regresarlo en la unidad.4. Para instalar el cabezal sobre la manija: ensarte

el cabezal sobre la manija y gírelo en el sentido horario hasta que los dos triángulos coincidan (Fig.8).

NOTA: La cuchilla para barba y bigote se puede limpiar en agua de la misma manera.

GARANTÍA LIMITADA POR TRES AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 36 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque de \$3,00US por gastos de envío y manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 36 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 36 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro



©2007 CONAIR CORPORATION

Centro de Servicio: Conair Corporation Service Department 7475 Glen Harbor Blvd., Glendale, Arizona 85307

07NG9004

4

IB-7247